Lead Screw Support




Code	Туре							
LHF03	Fixed Side	Support Unit Main Body						

	Number	Part Name	Quantity	Material	Surface Treatment
	1	Support Unit Main Body		S45C	
ĺ	2	Collar	1	S50C	Black Oxide
	3	Bearing Nut (with a Thread Protector)		S50C	1

! Uses two preload-adjusted Bearings.



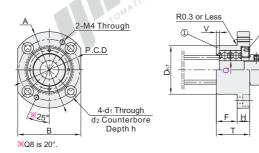

- [] Do not use without inserting the screw shaft (empty tightening). It may deform, causing it unusable
- 1 A collar for the clamp lever is not included in Q8. The clamp lever mounting dimensions will be the same as the Large Type.

I For Support Side Support Unit (LHF04) details, (see next page).



Part Nun	nber	т	Н	Е	D	Α	P·C·D	В	d.	do	461	V	E	Bearing	Clamp Lever	Bearing	Allowable Axial Load
Code	Q	-	Г	-		A	P.C.D	В	d1	d ₂	h		- - - - 	Nuts	Claimp Level	Type	(N)
	8	22		14	28	45	35	35	3.4	6.5	4		6	LEB81-M8	HAF73-M4-L32-J	608ZZ	1300
LHF03	10	24 8	8	16	34	52	42	42	4.5	8	4.5		8	LEB81-M10		6000ZZ	2300
LHF03	12			16	36	54	44	44	4.5	4.5			10	LEB81-M12		6001ZZ	2600
	15	27	10	17	40	63	50	52	5.5	9.5	5.5		12	LEB81-M15		6002ZZ	2900



